




# Single Line Reefing Instructions

595-488-E

Date: 16-06-05

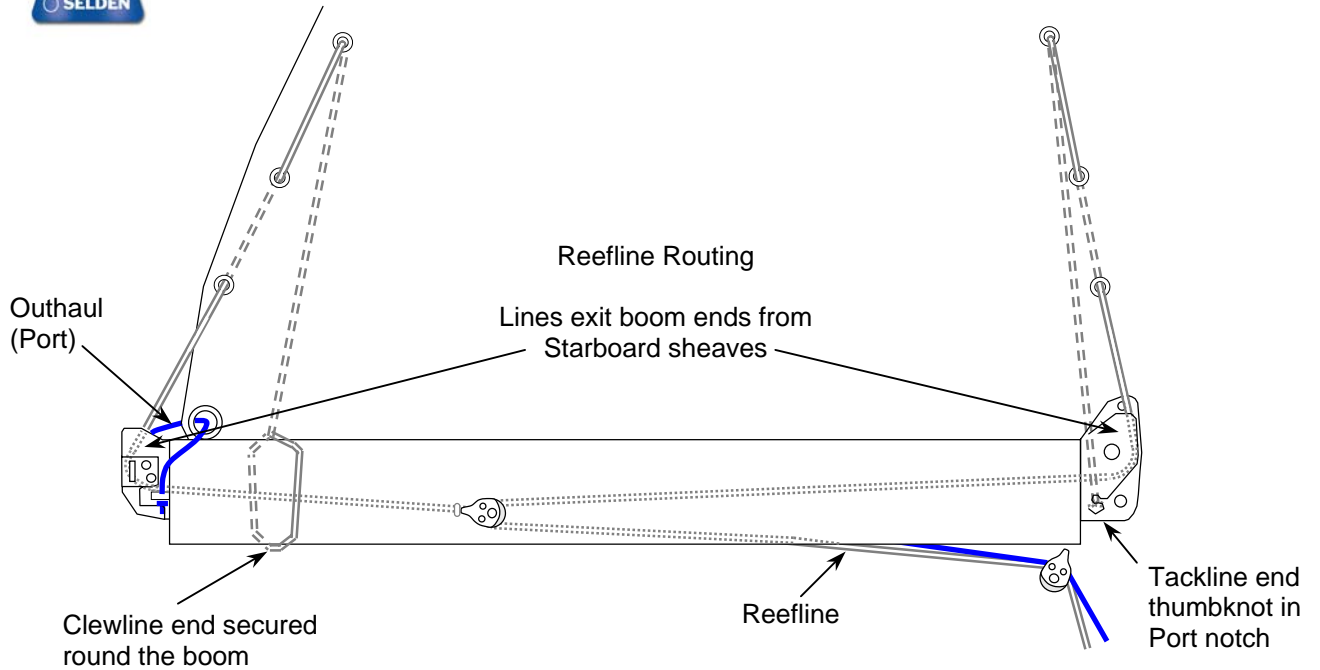

## Method

1. Ease sheet & GNAV.
2. Pull the reefline. The boom will angle up until all of the aft reefline (clewline) slack is taken in or GNAV travel limit is reached.
3. Ease the halyard, and continue pulling the reefline. The boom outer end will move down towards horizontal.
4. When the reefline has pulled the clew and tack down hard, jam it off.
5. Re-tension the halyard and adjust the GNAV & sheet.

